


LIGHT SKY®

广州市升龙灯光设备有限公司
FLY DRAGON LIGHTING EQUIPMENT CO.,LTD

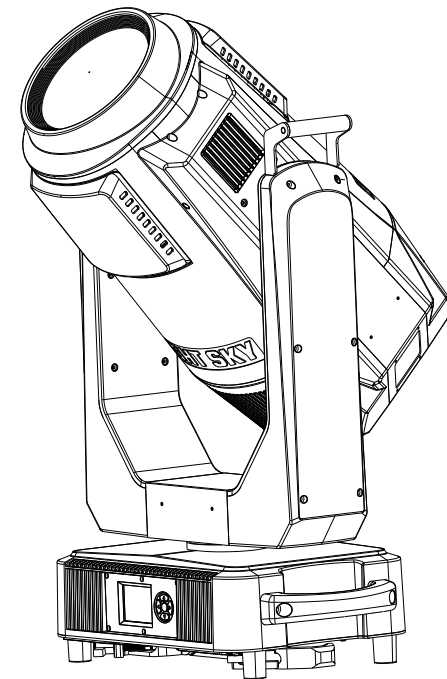

F1700WB-P 使用说明书 USER MANUAL

Please read these user manual carefully before use!
使用前请仔细阅读本产品使用说明书!

LIGHT SKY®

Tel:0086-20-61828288

Fax:0086-20-61828188 Pc:510800

Web:www.lightsky.com.cn

E-mail: flydragon@lightsky.com.cn

asia@lightsky.com.cn

india@lightsky.com.cn

europa@lightsky.com.cn

latinamerica@lightsky.com.cn

middle-east@lightsky.com.cn

american@lightsky.com.cn

Address: No. 43, Yunfeng Road, Xiuquan Street,
Huadu District, Guangzhou, China

地址: 广州市花都区秀全街云峰路43号



LIGHT SKY®



CHANNEL FUNCTION/ 通道功能

Channel / 通道	Value / DMX数值	Percentage / 百分比	Function / 功能	Note/ 备注
1	0-255	0-100	Pan/水平	
2	0-255	0-100	Pan Fine/水平微调	
3	0-255	0-100	Tilt/垂直	
4	0-255	0-100	Tilt fine/垂直微调	
5	0-255	0-100	Pan/Tilt speed	
6			Function/功能	
	0-9		Reserved (0=default)/保留 (0 = 默认值)	
	10-14		RESET ALL/所有功能复位	
	15-19		RESET DIMMER SHUTTER/调光频闪复位	
	20-24		RESET COLOR/COLOR复位	
	25-29		RESET FRAMING/切割模组复位	
	30-34		RESET PT/水平垂直轴复位	
	35-39		RESET ZOOM/调焦缩放复位	
	40-44		LAMP ON/开灯泡	
	45-49		LAMP OFF/关灯泡	
	50-54		Always/背光常亮	
	55-59		Auto (30S)/背光自动 (30S)	
	60-64		POWER MODE 1200W/功率模式1200W	
	65-69		POWER MODE 1400W/功率模式1400W	
	70-74		POWER MODE 1700W/功率模式1700W	
	75-255		Reserved/保留	
7			Shutter/ strobe/频闪	
	0 - 31		Shutter closed/关闭频闪	
	32 - 63		Shutter open (32=default) /打开频闪 (32 = 默认值)	
	64 - 95		Strobe-effect from slow to fast /同步频闪 (由慢至快)	
	96 - 127		Shutter open /打开频闪	
	128 - 143		Opening pulse in sequences from slow to fast/脉冲开启 (由慢至快)	
	144 - 159		Closing pulse in sequences from fast to slow /脉冲关闭 (由快至慢)	
	160 - 191		Shutter open/频闪 开	
	192 - 223		Random strobe-effect from slow to fast /随机频闪效果 (由慢至快)	
	224 - 255		Shutter open /频闪开启	
8	0 - 255	0-100	Dimmer/调光	
9	0 - 255	0-100	Dimmer fine/调光微调	
10	0 - 255	0-100	Cyan/青色	
11	0 - 255	0-100	Magenta/品红色	
12	0 - 255	0-100	Yellow/黄色	
13	0 - 255	0-100	CTO/降色温	
14	0 - 255	0-100	Blade UP1/叶片上1	
15	0 - 255	0-100	Blade UP2/叶片上2	
16	0 - 255	0-100	Blade DW1/叶片下1	
17	0 - 255	0-100	Blade DW2/叶片下2	
18	0 - 255	0-100	Blade LF1/叶片左1	

Channel / 通道	Value / DMX数值	Percentage / 百分比	Function / 功能	Note/ 备注
19	0 - 255	0-100	Blade LF2/叶片左2	
20	0 - 255	0-100	Blade RF1/叶片右1	
21	0 - 255	0-100	Blade RF2/叶片右2	
22	0 - 255	0-100	Framing Rot./切割旋转	
23			Framing Mac./切割宏	
	0 -- 10		No function/无功能	
	11 -- 20		Square/正方形	
	21 -- 30		Rectangle /长方形	
	31 -- 40		Regular triangle/等腰三角形	
	41 -- 50		Iisosceles trapezoid /等腰梯形	
	51 -- 60		Sector/扇形	
	61 -- 70		Semicircle /半圆	
	71 -- 255		Parallelogram /平行四边形	
24	0 - 255	0-100	Framing Mac. Zoom/切割宏缩放	
25	0 - 255	0-100	Zoom /缩放	
26	0 - 255	0-100	Focus/调焦	
27	0 - 255	0-100	Focus Fine /调焦微调	
28	0-255	0-100	Auto Fin. / 自动微调	
29			Auto Dis. / 自动距离	
	0 - 9		No function/无功能	
	10 -- 19		10M	
	20 -- 29		15M	
	30 -- 39		20M	
	40 -- 49		30M	
	50 -- 59		40M	
	60 -- 255		50M	
30			Iris / 光圈	
	0 - 127		Maximum to minimum aperture/最大光圈到最小光圈	
	128 - 159		Slow in and fast out from slow to fast/慢进快出 从慢到快	
	160 - 191		Fast in and slow out from slow to fast/快进慢出 从慢到快	
	192 - 255		Slow in Slow out from slow to fast/慢进慢出 从慢到快	
31			Frost1 / 雾化1	
	0 - 127		Minimum atomization to maximum atomization /最小雾化到最大雾化	
	128 - 159		Slow in and fast out from slow to fast/慢进快出 从慢到快	
	160 - 191		Fast in and slow out from slow to fast/快进慢出 从慢到快	
	192 - 255		Slow in Slow out from slow to fast/慢进慢出 从慢到快	
32			Frost2/ 雾化2	
	0 - 127		Minimum atomization to maximum atomization /最小雾化到最大雾化	
	128 - 159		Slow in and fast out from slow to fast/慢进快出 从慢到快	
	160 - 191		Fast in and slow out from slow to fast/快进慢出 从慢到快	
	192 - 255		Slow in Slow out from slow to fast/慢进慢出 从慢到快	