


LiGHT SKY

FLY DRAGON LIGHTING EQUIPMENT CO.,LTD

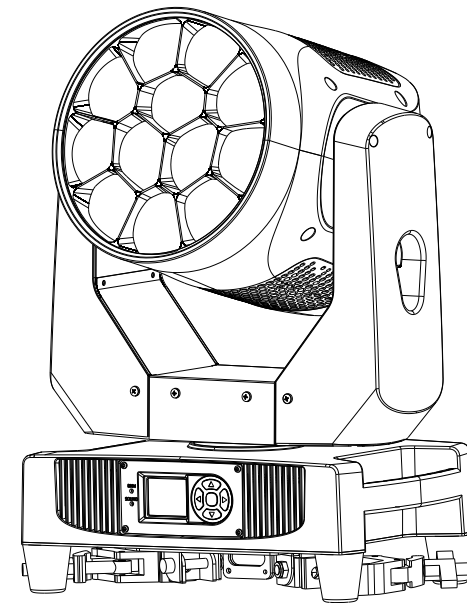

LiGHT SKY

Web:www.lightsky.com.cn

Tel: 0086-20-61828288

Fax:0086-20-61828188 Pc:510820

E-mail: flydragon@lightsky.com.cn

Address: No. 4, Jingneng Road 1,
Huadu District, Guangzhou, China



WWW.LIGHTSKY.COM.CN

PEARL WASH

User Channel

Please read these user manual carefully before use!

CHANNEL FUNCTION(V1.0)

Channel	Value/DMX	percentage	Function	Note
26CH				
1			PAN	
	0-255		0%...100%	
2			PAN FINE	
	0-255		0%...100%	
3			TILT	
	0-255		0%...100%	
4			TILT	
	0-255		0%...100%	
5			FUNCTION	
	0-127		No Fuction	
	128-255		Reset	
6			DIMMER	
	0-255		Dimmer 0%...100%	
7	0-127		DIMMER FINE	
	128-255		Dimmer 0%...100%	
8			Strobe	
	0-3		Light ON	
	4-103		Strobe Frequency	
	104-107		Light ON	
	108-207		Pulsation	
	208-212		Light ON	
	213-225		Random Slow	
	226-238		Random Medium	
	239-251		Random Fast	
9			RED	
	0-255		0-100% Red dimmer from dark to bright	
10			GREEN	
	0-255		0-100% green dimmer from dark to bright	
11			BLUE	
	0-255		0-100% Blue dimmer from dark to bright	
12			Lime Green	
	0-255		0-100% Lime Green dimmer from dark to bright	
13			Color Macro	
	0-255		Color Macro	
14			CCT	
	0-9		No Fuction	
	10-19		2200K	
	20-29		2800K	
	30-39		3000K	
	40-49		3200K	
	50-59		4000K	
	60-69		4800K	
	70-79		5600K	
	80-89		6000K	
	90-99		7000K	
100-255		8000K		

Channel	Value/DMX	percentage	Function	Note
15			Effect Macro	
	0-10		No Fuction	
	11-20		Macro1	
	21-30		Macro2	
	31-40		Macro3	
	41-50		Macro4	
	51-60		Macro5	
	61-70		Macro6	
	71-80		Macro7	
	81-90		Macro8	
	91-100		Macro9	
	101-110		Macro10	
	111-120		Macro11	
	121-130		Macro12	
	131-140		Macro 13	
	141-150		Macro 14	
	151-160		Macro 15	
	161-170		Macro 16	
	171-180		Macro 17	
	181-190		Macro 18	
191-200		Macro 19		
201-210		Macro 20		
211-220		Macro 21		
221-230		Macro 22		
231-240		Macro 23		
241-255		No Fuction		
16			Effect Speed	
	0-125		Macro Speed from slow to fast	
	126-129		Macro Stop	
	130-255		Macro Speed from fast to slow	
17			Effect Fade	
	0 - 255		0-100%	
18			Dimmer Back	
	0 - 255		Dimmer Back 0% - 100%	
19			Dimmer Fine Back	
	0 - 255		Dimmer Fine Back 0% - 100%	
20			Strobe Back	
	0 - 255		Macro Speed from slow to fast	
21			Red Back	
	0 - 255		0-100% Red dimmer from dark to bright	
22			Green Back	
	0 - 255		0-100% Green dimmer from dark to bright	
23			Blue Back	
	0 - 255		0-100% Blue dimmer from dark to bright	
24			Lime Back	
	0 - 255		0-100% Lime dimmer from dark to bright	
25			Zoom	
	0 - 255		0-100% Mix to Max	
26			Zoom ROTA	
	0-100		0-100% Run mode,Normal 0°-360°	
	101-190		CW Rotation	
	191-192		Run mode Stop	
	193-255		CCW Rotation	

Channel	Value/DMX	percentage	Function	Note
38CH				
1			PAN	
	0-255		0%...100%	
2			PAN FINE	
	0-255		0%...100%	
3			TILT	
	0-255		0%...100%	
4			TILT FINE	
	0-255		0%...100%	
5			FUNCTION	
	0-127		No Fuction	
	128-255		Reset	
6			DIMMER	
	0-255		Dimmer 0%...100%	
7			DIMMERFINE	
	0-4		Dimmer Fine 0%...100%	
8			Strobe	
	0-3		Light ON	
	4-103		Strobe Frequency	
	104-107		LightON	
	108-207		Pulsation	
	208-212		LightON	
	213-225		Random Slow	
	226-238		Random Medium	
9			RED-1	
	0-255		0-100% Red dimmer from dark to bright	
10			GREEN-1	
	0-255		0-100% green dimmer from dark to bright	
11			BLUE-1	
	0-255		0-100% Blue dimmer from dark to bright	
12			Lime GREEN -1	
	0-255		0 100% Lime green dimmer from dark to bright	
13			RED-2	
	0-255		0-100% Red dimmer from dark to bright	
14			GREEN-2	
	0-255		0-100% green dimmer from dark to bright	
15			BLUE-2	
	0-255		0-100% Blue dimmer from dark to bright	
16			Lime GREEN -2	
	0-255		0-100% Lime green dimmer from dark to bright	
17			RED-3	
	0-255		0-100% Red dimmer from dark to bright	
18			GREEN-3	
	0-255		0-100% green dimmer from dark to bright	
19			BLUE-3	
	0-255		0-100% Blue dimmer from dark to bright	

Channel	Value/DMX	percentage	Function	Note
20			LIME-3	
	0-255		0-100% LIME dimmer from dark to bright	
21			RED-4	
	0-255		0-100% Red dimmer from dark to bright	
22			GREEN-4	
	0-255		0-100% green dimmer from dark to bright	
23			BLUE-4	
	0-255		0-100% Blue dimmer from dark to bright	
24			LIME-4	
	0-255		0-100% LIME dimmer from dark to bright	
25			Color Macro	
	0-255		Color Macro	
26			CCT	
	0-9		No Fuction	
	10-19		2200K	
	20-29		2800K	
	30-39		3000K	
	40-49		3200K	
	50-59		4000K	
	60-69		4800K	
	70-79		5600K	
	80-89		6000K	
90-99		7000K		
100-255		8000K		
27			Effect Macro	
	0-10		No Fuction	
	11-20		Macro1	
	21-30		Macro2	
	31-40		Macro3	
	41-50		Macro4	
	51-60		Macro5	
	61-70		Macro6	
	71-80		Macro7	
	81-90		Macro8	
	91-100		Macro9	
	101-110		Macro10	
	111-120		Macro11	
	121-130		Macro12	
	131-140		Macro 13	
	141-150		Macro 14	
	151-160		Macro 15	
	161-170		Macro 16	
171-180		Macro 17		
181-190		Macro 18		
191-200		Macro 19		

Channel	Value/DMX	percentage	Function	Note
	201-210		Macro 20	
	211-220		Macro 21	
	221-230		Macro 22	
	231-240		Macro 23	
	241-255		No Fuction	
28			Effect Speed	
	0-125		Macro Speed from slow to fast	
	126-129		Macro Stop	
	130-255		Macro Speed from fast to slow	
29			Effect Fade	
	0-255		0-100%	
30			Dimmer Back	
	0-255		Dimmer Back 0% - 100%	
31			Dimmer Fine Back	
	0-255		Dimmer Fine Back 0% - 100%	
32			Strobe Back	
	0-255		Macro Speed from slow to fast	
33			Red Back	
	0-255		0-100% Red dimmer from dark to bright	
34			Green Back	
	0-255		0-100% Green dimmer from dark to bright	
35			Blue Back	
	0-255		0-100% Blue dimmer from dark to bright	
36			Lime Back	
	0-255		0-100% Lime dimmer from dark to bright	
37			Zoom	
	0-255		0-100% Mix to Max	
38			Zoom ROTA	
	0-100		0-100% Run mode,Normal 0°-360°	
	101-190		CW Rotation	
	191-192		Run_mode_Stop	
	193-255		CCW Rotation	