





Web:www.lightsky.com.cn

Tel: 0086-20-61828288

Fax:0086-20-61828188 Pc:510820 E-mail: flydragon@lightsky.com.cn

Address: No. 4, Jingneng Road 1, Huadu District, Guangzhou, China



## PL1915 HC User Channel

Please read these user manual carefully before use

## **MENU SETTING**

Main menu	I Menu	II Menu	Note	
Addr	A. ***		Set address code (default 001)	
AUTO	DMX. F	BLAC	When there is no DMX signal, black burst	
		HOLD	When there is no DMX signal, keep the last state (default)	
		L1	When there is no DMX signal, it will be 2550K bright	
		L2	When there is no DMX signal, it will be on at 6400K	
		L1L2	When there is no DMX signal, it will be on at 2550K+6400K	
	M-S	SLAV	In master-slave mode, slave (default)	
		MAST	In master-slave mode, the master	
INFO	VERS	V*. 00	software version number	
	TEMP	xx. C	Lamp temperature	
	FAN		Fan voltage/speed (press up and down keys to switch)	
MANU	1. 000		2550K	
	2. 000		6400K	
FACT	CODE		(After factory reset, all the above settings will return to "default")	

Quick light: When the lamp has no DMX signal, press and hold Enter for 3 seconds, the light is fully on; press the up and down buttons to adjust the brightness, long press the MODE button for 3 seconds to exit the "quick light" mode, and the lamp will turn off.

## **CHANNEL FUNCTION**

Channe I	DMX	Function/	Note
5CH			
		Shutter	
1	02	No function	
'		Strobe effect slow to fast	
	3255		
2		Dimmer	
2	0255	Dimmer 0%100%	
		2550K	
3		0-100% dimmer from dark to bright	
	0255		
		6400K	
4		0-100% dimmer from dark to bright	
	0255		
		ССТ	
5	0-3	No function	
	4255	2550K-6400K	_